





 

 



 



 


 







 




 



**PREPARATION****SST (SPECIAL SERVICE TOOLS)**

 
 
 
	<b>09226-10010</b> Crankshaft Front & Rear Bearing Replacer	
	<b>09308-00010</b> Oil Seal Puller	
	<b>09308-10010</b> Oil Seal Puller	
	<b>09316-60010</b> Transmission & Transfer Bearing Replacer	
	<b>(09316-00040)</b> Replacer 'C'	
	<b>09330-00021</b> Companion Flange Holding Tool	
	<b>09350-20015</b> TOYOTA Automatic Transmission Tool Set	
	<b>(09369-20040)</b> Piston Spring Compressor Set	
	<b>09504-22011</b> Differential Side Bearing Replacer	
	<b>09506-30012</b> Differential Drive Pinion Rear Bearing Cone Replacer	
	<b>09550-10012</b> Replacer Set 'B'	
	<b>(09558-10010)</b> Rear Axle Shaft Oil Seal Replacer	
	<b>09550-22011</b> Rear Axle Bearing & Differential Tool Set	

## SUSPENSION AND AXLE - FRONT DIFFERENTIAL

	(09550-00020) Handle	
	(09550-00031) Replacer	
	09554-14010 Differential Oil Seal Replacer	
	09554-30011 Differential Oil Seal Replacer	
	09556-22010 Drive Pinion Front Bearing Remover	
	09556-30010 Drive Pinion Front Bearing Remover	
	09608-30012 Front Hub & Drive Pinion Bearing Tool Set	
	(09608-04060) Front Hub Outer Bearing Cup Replacer	
	09608-35014 Axle Hub & Drive Pinion Bearing Tool Set	
	(09608-08020) Handle	
	(09608-06110) Front Hub Inner & Drive Pinion Front Bearing Cup Replacer	
	(09608-06120) Front Hub Outer Bearing Cup Replacer	
	09620-30010 Steering Gear Box Replacer Set	
	(09625-30010) Steering Main Shaft Bearing Replacer	

	<b>09910-00015</b> Puller Set	
	<b>(09911-00011)</b> Puller Clamp	
	<b>(09912-00010)</b> Puller Slide Hammer	
	<b>(09914-00011)</b> Rear Axle Shaft Puller Attachment	
	<b>09950-00020</b> Bearing Remover	
	<b>09950-30010</b> Puller A Set	
	<b>09950-40010</b> Puller B Set	

## RECOMMENDED TOOLS

	<b>09025-00010</b> Torque Wrench (30 kgf-cm) .	
	<b>09031-00030</b> Pin Punch .	
	<b>09044-00010</b> Tom Socket E 14 .	

## EQUIPMENT

Dial indicator or dial indicator with magnetic base	
Micrometer	
Torque wrench	

**LUBRICANT**

Item	Capacity	Classification
Differential oil (w/A.D.D.)	<b>1.86 liters (1.97 Us qts, 1.64 Imp.qts)</b>	AN GL-5 Hypoid gear oil 75W-90
Differential oil (w/o A.D.D.)	<b>1.60 liters (1.69 US qts, 1.41 Imp.qts)</b>	API GL-5 Hypoid gear oil [Above -18° C (0° F)] SAE 90W [Below -18* C (0 F)] SAE 80W or 80W -90

**SSM (SPECIAL SERVICE MATERIALS)**

<b>08826-00090</b>	Seal Packing 1281, THREE BOND 1281 or equivalent (FIG)	Differential carrier x Cover A.D.D. actuator x Clutch case Clutch case x Differential carrier
--------------------	---	--